2: Blackman E-5 (1920-1926) 1927
MR13 Fellahin MR13
Upper Egypt

are left on the ground to dry and harden in the sun. Every housewife is careful to see that she has always a plentiful supply of this fuel, which is neatly stacked in large quantities on the roofs of the houses.

Basket-making is a very large and important industry. Certain kinds of baskets are made in almost every village throughout the country, but a few types are characteristic of certain localities only. Many of the commoner kinds of baskets are strong and well made, but the finest work is to be found in the more southern provinces; indeed, the farther south one goes the better the workmanship. Baskets are made by both men and women, though I have found that in some localities this work tends to be monopolized by one of the sexes only; and one type of basket at least, so I was told, is made only by men. Baskets are constructed mostly out of date-palm leaves and the mid-ribs of palm-branches, but one variety in the south is made from the leaves of *dōm*-palms. These particular baskets are easily to be recognized by the shiny surface of the material employed in their manufacture.

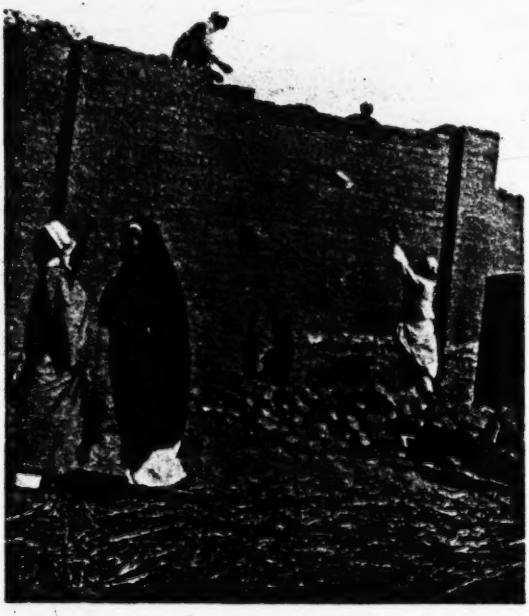

FIG. 82. BUILDING A WALL

The commonest and one of the most useful baskets in general use is called the *maḳṭaf* (Fig. 83). It is used in field-work, for the

342 3. Houses of regular design on the model '*ezbas*', such as those of the Royal Domains, the Agricultural Society, and a few individual landowners.

4. Shapeless huts made by newcomers and semi-nomads out of rags, empty petrol tins, palm leaves and mud.

5. Fieldshelters (*zarbiya*): huts built of reeds, or mere screens of maize stalks set in the open country during the period of heavy winter work.

But these, as has been said, are exceptions; the typical fellah house, representing 92% of the total, is of earth. It is a dwelling without style or age, which is yet one more sign of the persistent uniformity of the Egyptian peasantry.

361 342 363 362 Let us walk into one of the alleys that wind through the clustered village. On each side the narrow dun-coloured houses stand wall to wall. They may be from five to ten metres wide, and about two and a half metres high, or at the most five if there is an upper storey. The quarter is old, and the village older still, but the house itself is comparatively new. This is because the materials and the methods of construction make the building impermanent. Fires, and in Lower Egypt the Nile flood and the rain, have necessitated constant repairs, which soon leave little of the original structure.

181 The dwelling of the fellah, like his work, derives its character from the soil, the manner of his life, and the social environment. The fellah is housed by the same earth that feeds him. He is a man of the soil in the true sense of the word. Here it is true that matter determines form.

333 331 342 The staple building-material is a mixture of clayey soil, straw (from barley, beans, or flax), cow-dung, and Nile water. This may be smeared over both sides of a rough framework of maize stalks, palm leaves, or reeds, to make the mud walls of the poorest type of house. It may be poured into wooden moulds to make crude bricks (*tûb akhdar*), which are dried in the sun and then used for building. The mortar used to join them is made of the same simple mixture, and so is the plaster which sometimes covers and protects the walls.

A wall so constructed, to be strong enough, must be from twelve to eighteen inches thick. A fellah with money to spare will build on a foundation of kiln-baked bricks (*tûb ahmar*) or of limestone rubble. This prevents the damp

333
331
342
342
341

that creeps up from the soil from undermining the building. The walls have few apertures, partly, again, to ensure stability, but also to protect the interior from heat and glare by day, and against the cold and dangers of the night. The doorway, which is about six feet high and three wide, is separated from the street by a shallow threshold. One or two tiny loopholes above eye level, measuring about twelve inches by eight, are the only other openings to the outside; and even these are stuffed up in winter.

This limitation of window space is due partly to the high price of wood. Egypt, lying in the sparsely wooded zone of tropical desert which stretches from India to the Sudan, is poorly supplied with wood. The date palms, sycamores, and acacias that give shade to the villages are too precious to be cut down for beams, and would in any case be insufficient to provide all the doors and windows that proper hygiene would necessitate. The trunks of date palms are certainly used, but very sparingly, since such trees bring their owners P.T. 100 a year in fruit, branches and fibre. Imported wood (from Finland, Sweden, Rumania and the U.S.S.R.), though commonly used in the towns, is beyond the normal means of the fellah. The result is that the doorway very often contains no door, and the loopholes are almost always without either glass or woodwork. [137]

Though wood is dispensed with as far as possible, for the roof it is essential. In Upper Egypt, where it never rains, some houses remain roofless; but this is exceptional, and as a rule the four walls are at least covered with foliage. Ill-squared beams, set two feet apart, serve as a support for the interwoven stalks of maize, cotton, or reeds, together with palm branches. To prevent this construction from rotting, it is covered with rough mats and plastered with a thick layer of mud-and-cinder. This makes a terrace, which is proof against showers and solid enough in summer to support a roof-hut and the sleeping bodies of all the members of the household. The roof can be reached from outside by a wooden ladder or brick staircase; constant access is needed to the place where tools, grain reserves, fuel, and sometimes even poultry are kept. [513]

The necessary habit of keeping dry brushwood and straw on the roof is a frequent cause of fire, which, by reason of the closeness of the houses, soon spreads to the neighbourhood 372 488 731